


2-Din 12.331038-01

Installation manual for: **Cadillac BLS 2006 -->**

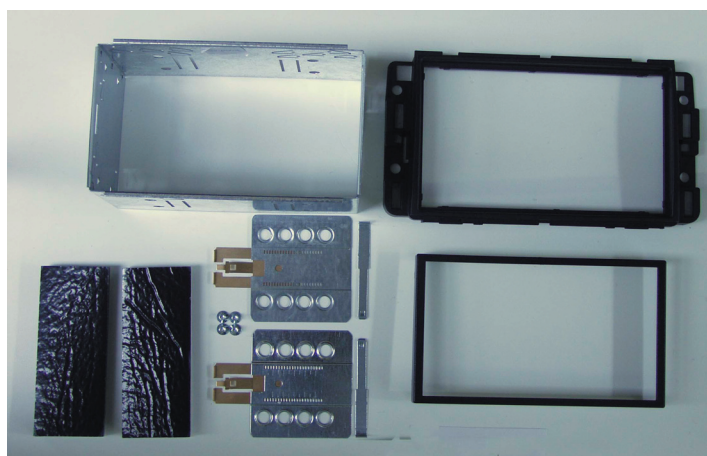

Installation kit includes the following items:

- * 1X 2-ISO 100 mm. metal bracket
- * 1X Replacement panel
- * 1X Radio trim
- * 2X Mounting plates
- * 2X Mounting spacers
- * 4X Screws
- * 2X Cushion
- * 2X Radio keys



2-Din 12.331038-01

1



Use a plastic wig to loosen the panel.

2



Remove the two screws at the location of the arrows. Now you can gently remove the whole surrounding panel.

3



Remove the original radio. Loosen the screws at the location of the arrows.

4




Place the 2 - din metal bracket.

5



Place the headunit and connect all the wiring. Gently replace all the panels in reverse order.



Connect all of the needed wiring harnesses and check all connections carefully

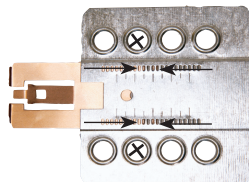

Alpine IVA-W205R

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 10 & 12 marked with an arrow.
Measured from left to right.

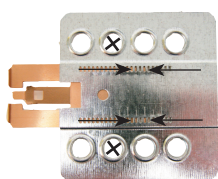
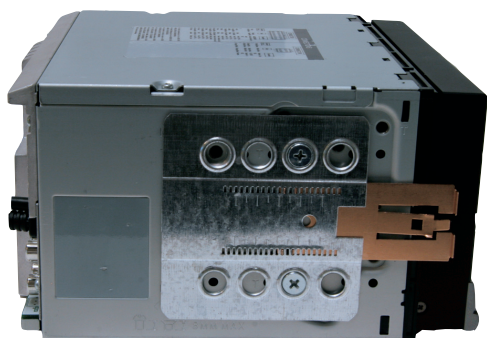


Alpine IVA-W200Ri

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.



clarion

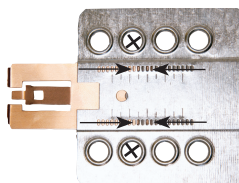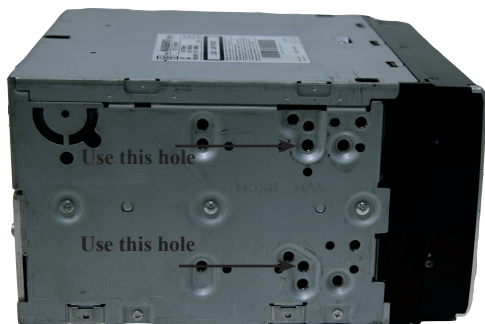

Clarion MAX668RVD

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 11 & 13 marked with an arrow.
Measured from left to right.

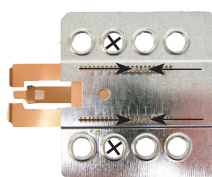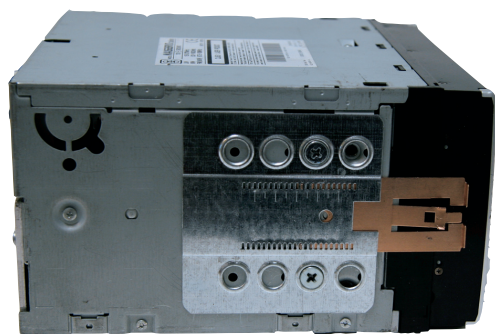



Clarion WXZ468RMP

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.

KENWOOD



Listen to the Future

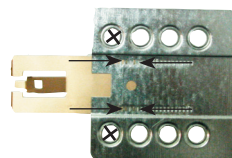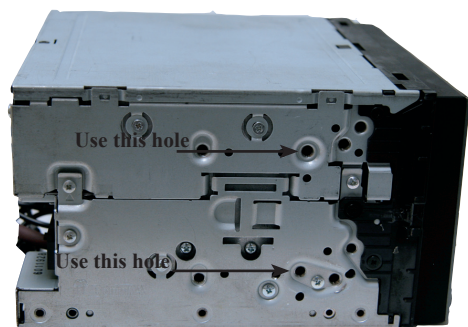

Kenwood DDX6029

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 6 & 8 marked with an arrow.
Measured from left to right.

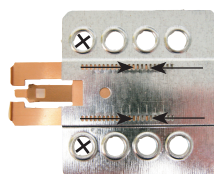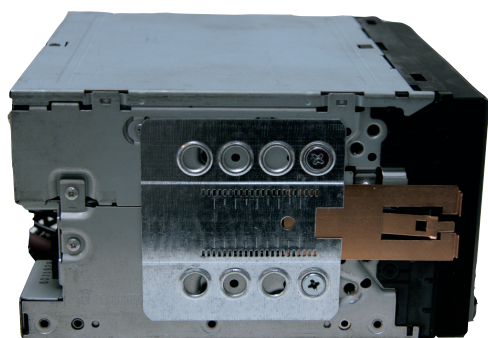


Kenwood DDX 7025

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.



Pioneer

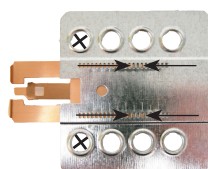

Pioneer HD1BT

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 10 & 12 marked with an arrow.
Measured from left to right.

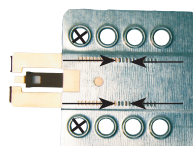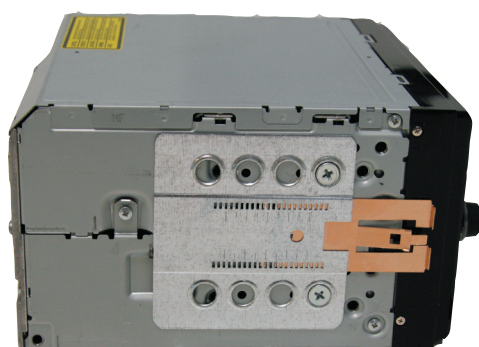

Pioneer Avic D3

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 12 & 14 marked with an arrow.
Measured from left to right.