


# 2-Din 12.331086-04

Installation manual for:

## **Chevrolet Nubira 2008--> Lacetti 2008-->**

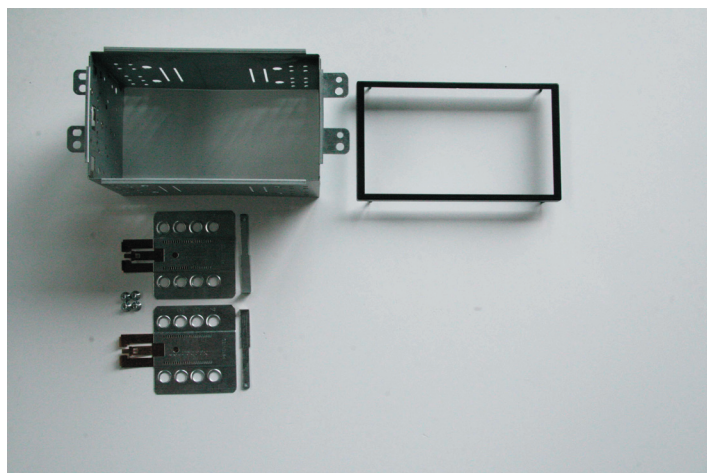

Installation kit includes the following items:

- \* 1X 2-ISO 100 mm. metal bracket
- \* 1X Radio trim
- \* 2X Mounting plates
- \* 2X Mounting spacers
- \* 2X Radio removal keys
- \* 4X Screws

**ALPINE**  
Mobile Media Solutions

clarion



**KENWOOD**  
Listen to the Future

**Pioneer**

# 2-Din 12.331086-04

1



Remove the dashboard panel at the location of the arrows.

2



Remove the radio and the storage bin. This is thighten by screws.

3



4



Place the 2-Din metal bracket.

5




Place the headunit and replace all the panels.

6



Place the radio trim.



***Connect all of the needed wiring harnesses and check the connections carefully.***

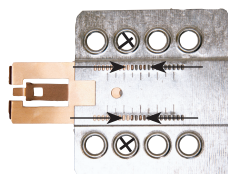

Alpine IVA-W205R

We advice to use the following positions.  
Other positions are also possible.

Use position 2 marked with a cross.  
Use position 11 & 13 marked with an arrow.  
Measured from left to right.

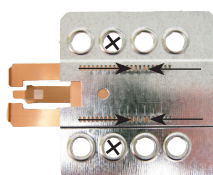
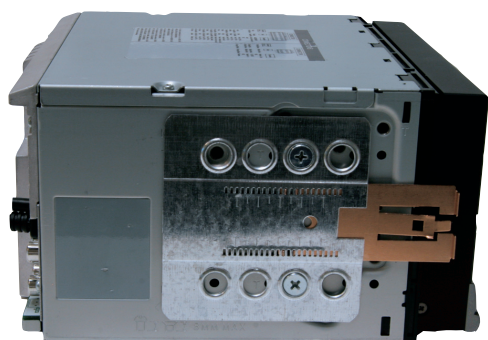


Alpine IVA-W200Ri

We advice to use the following positions.  
Other positions are also possible.

Use position 2 marked with a cross.  
Use position 14 & 16 marked with an arrow.  
Measured from left to right.



# clarion

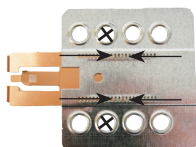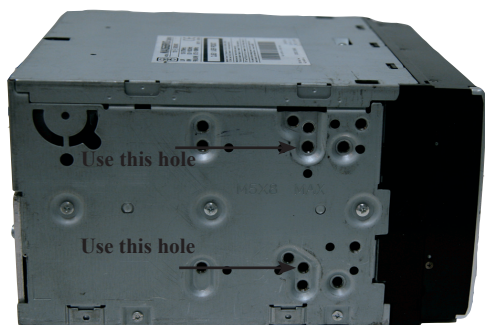

Clarion MAX668RVD

We advice to use the following positions.  
Other positions are also possible.

Use position 2 marked with a cross.  
Use position 16 & 18 marked with an arrow.  
Measured from left to right.

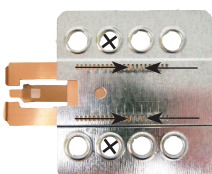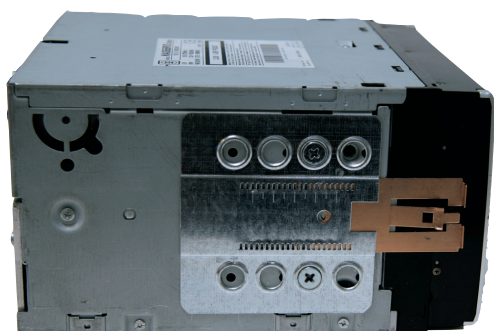

Clarion WXZ468RMP



We advice to use the following positions.  
Other positions are also possible.

Use position 2 marked with a cross.  
Use position 14 & 16 marked with an arrow.  
Measured from left to right.



# KENWOOD



Listen to the Future

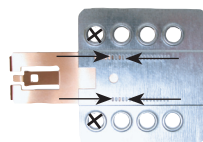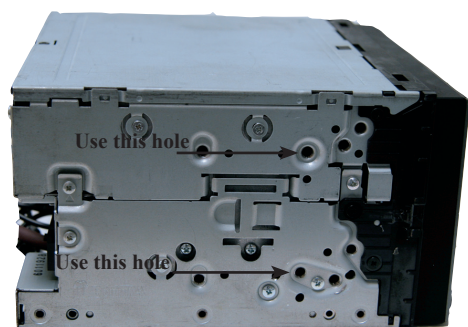

Kenwood DNX7200

We advice to use the following positions.  
Other positions are also possible.

Use position 2 marked with a cross.  
Use position 14 & 16 marked with an arrow.  
Measured from left to right.

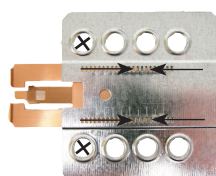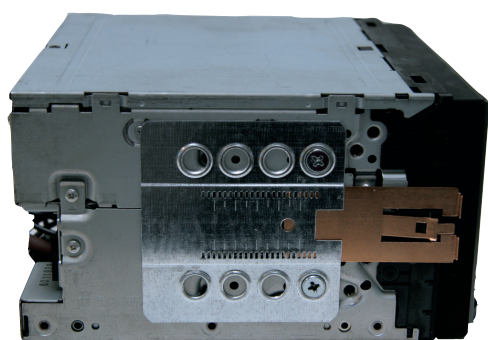


Kenwood DDX 7025

We advice to use the following positions.  
Other positions are also possible.

Use position 1 marked with a cross.  
Use position 14 & 16 marked with an arrow.  
Measured from left to right.



# Pioneer

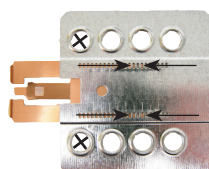

Pioneer HD1BT

We advice to use the following positions.  
Other positions are also possible.

Use position 1 marked with a cross.  
Use position 14 & 16 marked with an arrow.  
Measured from left to right.

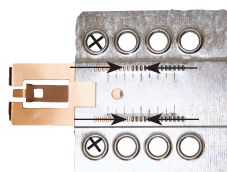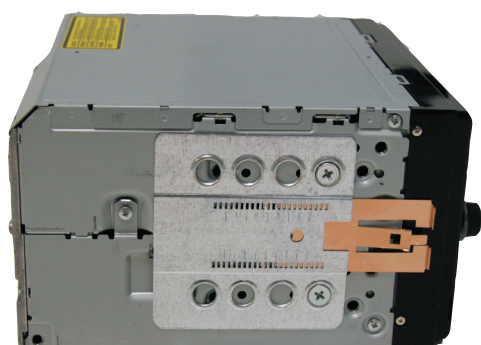

Pioneer Avic D3

We advice to use the following positions.  
Other positions are also possible.

Use position 2 marked with a cross.  
Use position 16 & 18 marked with an arrow.  
Measured from left to right.