


2-Din 12.331094-05/ 12.331094-12

Installation manual for:
Fiat Bravo 2007 -->
Fiat Croma 2008-->

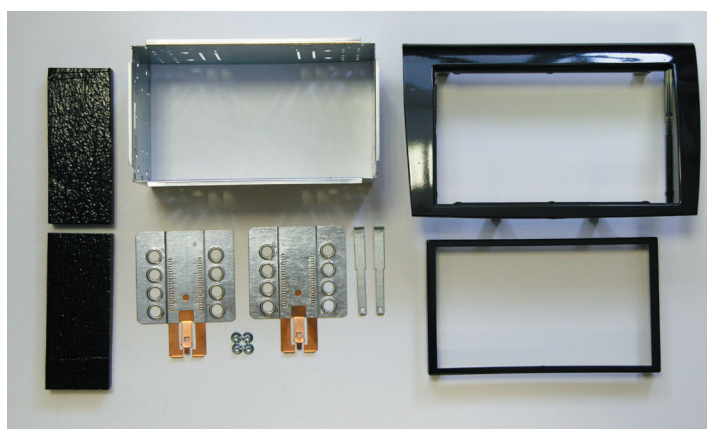

Installation kit includes the following items:

- * 1X 2-ISO 100 mm. metal bracket
- * 1X Replacement frame
- * 1X Radio trim
- * 2X Mounting plates
- * 2X Mounting spacers
- * 4X Screws
- * 2X Radio removal keys
- * 2X Cushion

ALPINE
Mobile Media Solutions

clarion



KENWOOD
Listen to the Future

Pioneer

2-Din 12.331094-12

1



Remove the radio using the original radio release keys.

2



3




Place the replacement panel and the 2-Din metal bracket.

4





Place the headunit and the radio trim.

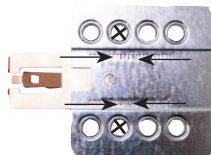

Alpine IVA-W205R

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 12 & 14 marked with an arrow.
Measured from left to right.

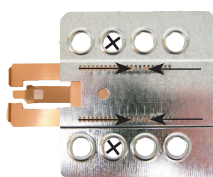
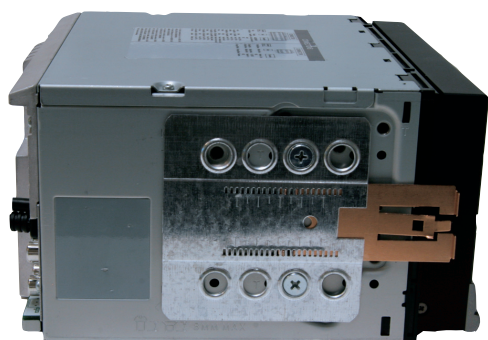


Alpine IVA-W200Ri

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.



clarion

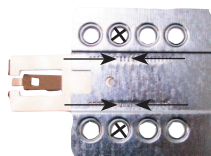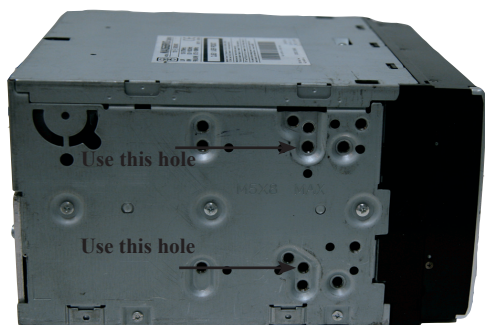

Clarion MAX668RVD

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.

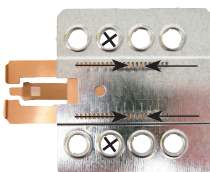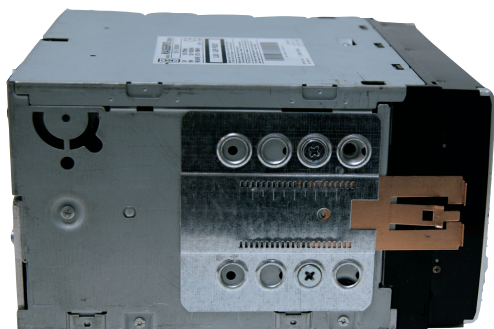



Clarion WXZ468RMP

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.

KENWOOD



Listen to the Future

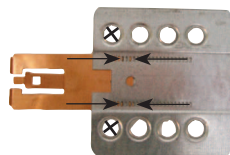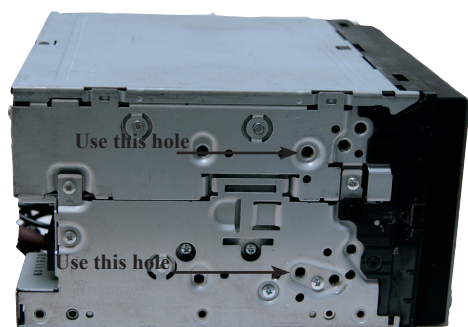

Kenwood DDX6029

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 4 & 6 marked with an arrow.
Measured from left to right.

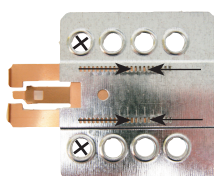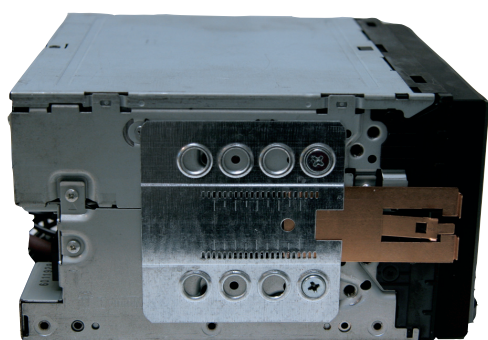


Kenwood DDX 7025

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 10 & 12 marked with an arrow.
Measured from left to right.



Pioneer

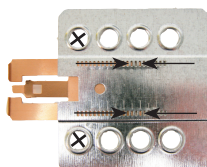

Pioneer HD1BT

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.

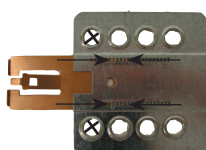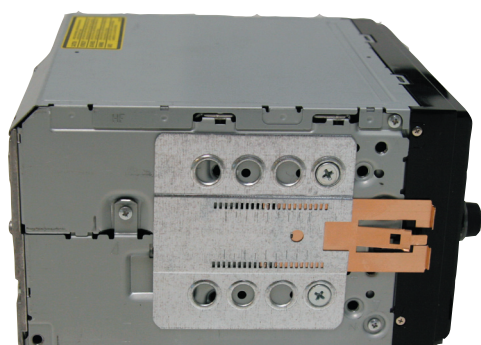

Pioneer Avic D3

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 10 & 12 marked with an arrow.
Measured from left to right.